

## ***Synth Controller manual addendum for edition 'Alpha' for Roland Alpha Juno and MKS-50***

The Juno has a menu labeled MIDI FUNCTIONS. For the Synth Controller to work with your Juno please change the following parameters accordingly:

- „1. MIDI Channel“ - should be set to the same channel as the Synth Controller's basechannel.  
The factory default is channel 1
- „6. MIDI Exclusive“ to ON
- „10 MIDI Volume“ to ON
- „11 MIDI Portamento“ to ON

The Controller's parameters in the green layer labeled „CHORD PRESET“ and „PLY/MONO/CHRD“ do only have a function when being used with a MKS-50 which supports CHORD presets.